Package Contents

CD & Quickstart Guide

1

Netopia 3-D Reach PC Card

2

-or-

Netopia 3-D Reach USB Adapter

3

1 Install the Netopia Wireless Drivers

Note: *For **Windows XP or Vista**, the Netopia 3-D Reach Utility is not installed. Windows XP or Vista users should use the Windows operating system automatic wireless network configuration feature to configure the wireless connection.*

PC Card or USB Adapter for Microsoft Windows 98SE, ME, 2000

IMPORTANT: INSTALL THE CD FIRST, THEN INSTALL THE ADAPTER WHEN PROMPTED.

1. **Insert the CD.**

   The wizard will run automatically and allow you to choose your installation. Follow the on-screen instructions to load the driver for the Netopia 3-D Reach Wireless Adapter.

   When the installation is complete, a new Wireless communication icon will appear in your system tray in the Windows toolbar.

2. **Double-click the Wireless icon to start the Netopia 3-D Reach Utility. (See the Help menu button for detailed feature descriptions.)**

2 Install the Netopia Wireless PC Card or USB Adapter

1. **Netopia 3-D Reach PC Card: Install the Netopia Wireless PC Card in your PC or laptop as appropriate to your particular hardware. Be sure to discharge any static electricity before handling the card by touching the metal chassis of your computer.**

netopia® BROADBAND WITHOUT BOUNDARIES®
Netopia® 3-D Reach® Wireless Adapters Installation

Package Contents

CD & Quickstart Guide

1

Netopia 3-D Reach PC Card

2

-or-

Netopia 3-D Reach USB Adapter

3

1 Install the Netopia Wireless Drivers

Note: *For **Windows XP or Vista**, the Netopia 3-D Reach Utility is not installed. Windows XP or Vista users should use the Windows operating system automatic wireless network configuration feature to configure the wireless connection.*

PC Card or USB Adapter for Microsoft Windows 98SE, ME, 2000

IMPORTANT: INSTALL THE CD FIRST, THEN INSTALL THE ADAPTER WHEN PROMPTED.

1. **Insert the CD.**

   The wizard will run automatically and allow you to choose your installation. Follow the on-screen instructions to load the driver for the Netopia 3-D Reach Wireless Adapter.

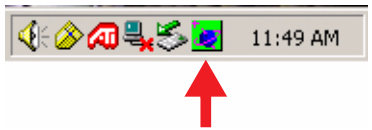

   When the installation is complete, a new Wireless communication icon will appear in your system tray in the Windows toolbar.

2. **Double-click the Wireless icon to start the Netopia 3-D Reach Utility. (See the Help menu button for detailed feature descriptions.)**

2 Install the Netopia Wireless PC Card or USB Adapter

1. **Netopia 3-D Reach PC Card: Install the Netopia Wireless PC Card in your PC or laptop as appropriate to your particular hardware. Be sure to discharge any static electricity before handling the card by touching the metal chassis of your computer.**

2. **Insert the PC Card in the Cardbus slot in your computer. The label side should be facing upward, and the pin connector end of the card should seat firmly in the Cardbus slot.**

–OR–

Netopia 3-D Reach USB Adapter: Connect the Netopia Wireless USB Adapter to any available USB port on your PC.

The card or USB adapter should be immediately recognized. If necessary, you can use the Netopia 3-D Reach Utility to configure and monitor your wireless connectivity.

You can enable Wireless Security on your Wireless network by using the security features of your PC Card or USB Adapter in conjunction with your Netopia Wireless Gateway. (See the User Manual on your CD.)

Netopia Part Number: 6180208-00-01

Copyright 2007, Netopia, Inc. Netopia, the Netopia logo, and 3-D Reach are registered trademarks belonging to Netopia, Inc., registered U.S. Patent and Trademark Office. All other trademarks are the property of their respective owners. All rights reserved.

2. **Insert the PC Card in the Cardbus slot in your computer. The label side should be facing upward, and the pin connector end of the card should seat firmly in the Cardbus slot.**

–OR–

Netopia 3-D Reach USB Adapter: Connect the Netopia Wireless USB Adapter to any available USB port on your PC.

The card or USB adapter should be immediately recognized. If necessary, you can use the Netopia 3-D Reach Utility to configure and monitor your wireless connectivity.

You can enable Wireless Security on your Wireless network by using the security features of your PC Card or USB Adapter in conjunction with your Netopia Wireless Gateway. (See the User Manual on your CD.)

Netopia Part Number: 6180208-00-01

Copyright 2007, Netopia, Inc. Netopia, the Netopia logo, and 3-D Reach are registered trademarks belonging to Netopia, Inc., registered U.S. Patent and Trademark Office. All other trademarks are the property of their respective owners. All rights reserved.